

CASA LUSSO Installation Instructions

ELEMENTS Square Shower Rail with External Water Inlet (ESR03-XX) ELEMENTS Gooseneck Shower Rail with External Water Inlet (ESR06-XX)

Suits ELA-XX, ELD-XX, ELF-XX & SS150-XX/SHP-MB

**CONGRATULATIONS ON THE PURCHASE OF YOUR NEW CASA LUSSO TAPWARE.
WE HOPE YOU AND YOUR FAMILY ENJOY YOUR NEW PRODUCT AND CONSIDER US FOR ANY
FUTURE PROJECT. CASA LUSSO PRODUCTS HAVE BEEN MANUFACTURED UNDER THE
HIGHEST STANDARDS OF QUALITY AND WORKMANSHIP.**



ESR03-XX

ESR06-XX

ESR03-XX - Square Shower Rail with External Water Inlet
ESR06-XX - Gooseneck Shower Rail with External Water Inlet



GENERAL INFORMATION

MAINTENANCE

- Clean regularly using mild soap and dry with a soft cloth.
- Do not use abrasive cleaners, harsh detergents or citrus based cleaners on any products as these will scratch the surface.
- Tightening or adjustment of Tapware over time is considered general maintenance.
- Failure to clean/replace aerators/flow restrictors as required will void warranty.
- Damage to finishes that arise from installation or post installation will void warranty.

The warranty will not apply if:

- The product has been damaged by improper use;
- The product has not been used in accordance with any applicable instruction guide;
- The purchaser has attempted to modify or repair the product;
- The purchaser has failed to observe the cleaning and maintenance guidelines;
- The product is not installed by a licenced Plumber.
- Flow controllers/ aerators not regularly cleaned/ replaced.

Product warranties are personal to the person who acquires the product for their own consumption or use and not for resale or resupply. Claims with this product cannot be made by anyone other than the consumer. Where a product is covered by parts and labour warranty, the warranty covers both the repair of the defective part or the provision of a spare part to replace the defective part and the installation of that part. Where a product is covered by parts only, the warranty covers both the repair of the defective part or the provision of a spare part in replacement. It does not include the removal of the defective part or the installations of the repaired or replaced part. We reserve the right to provide minor components (e.g. handles, aerators, hoses, dress rings and washers) as 'Parts Only' to the customer. Casa Lusso reserves the right to alter/ amend this warranty offer in writing at any time.

FEATURES

Premium Warranty (Domestic Use):
5 year replacement products and parts ¹
1 year parts & labour

Material: Stainless Steel 304 Construction

**ALL INSTALLATIONS MUST COMPLY
WITH AS/NZS3500**

**This product complies with the requirements
of Lead-Free standards as defined in the
National Construction Code Volume 3 and
is suitable for use as part of Lead-Free
Installation.**

¹ One year replacement product and parts
applies to Shower Hose only (SS150-XX/SHP-MB)

FAILURE TO COMPLY WITH ANY OF THE ABOVE INSTRUCTIONS WILL VOID ALL WARRANTIES

CASA LUSSO Installation Instructions

ELEMENTS Square Shower Rail with External Water Inlet (ESR03-XX) ELEMENTS Gooseneck Shower Rail with External Water Inlet (ESR06-XX)


Suits ELA-XX, ELD-XX, ELF-XX & SS150-XX/SHP-MB

INSTALLATION

Assemble parts ELA, ELD + (ELE or ELF) together.

NOTE: USE SILICONE LUBRICANT ON ALL O-RING WHEN CONNECTING PARTS TOGETHER.

- Install the handshower slider A-4 to the shower rail A-3.
- Connect parts C-2, A-3, A-5, C-6 and (ELE or ELF) together. Grub screws G may need to be loosened for part to connect together properly. Keep in mind if the installation of the shower rail will be top or bottom water inlet
- Tighten 4x grub screws G, make sure the direction of the grub screw is facing the showerwall so it cannot be seen from the front.

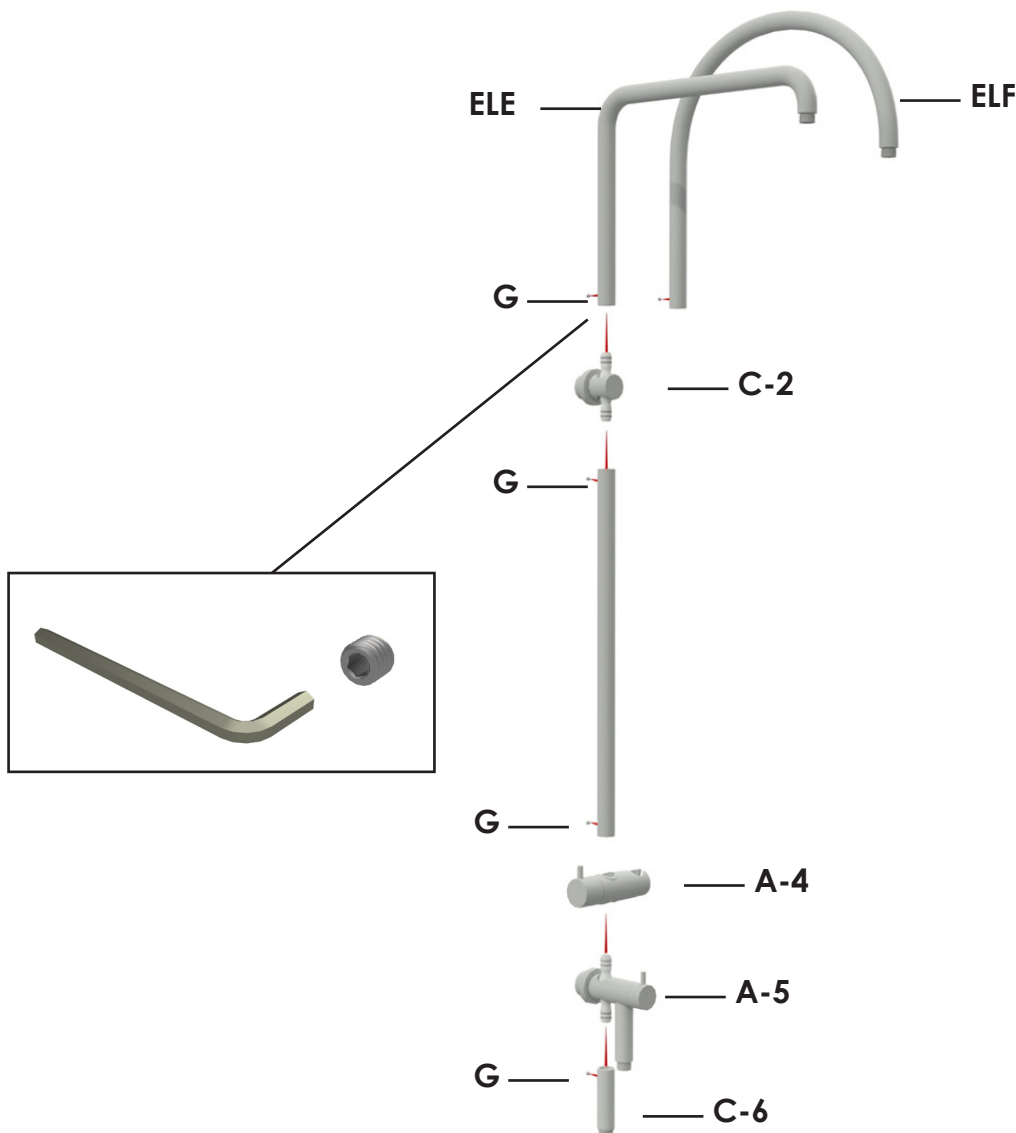

FAILURE TO COMPLY WITH ANY OF THE ABOVE INSTRUCTIONS WILL VOID ALL WARRANTIES

CASA LUSSO Installation Instructions

ELEMENTS Square Shower Rail with External Water Inlet (ESR03-XX) ELEMENTS Gooseneck Shower Rail with External Water Inlet (ESR06-XX)


Suits ELA-XX, ELD-XX, ELF-XX & SS150-XX/SHP-MB

2. Install connections on the wall.

- Mark 520mm distance between water outlet and wall bracket.
- Use masking tape to mark hole locations before drilling.
- Before drilling, check distance with the assembled shower rail.
- Make sure the overhead shower and gooseneck do not interfere with the ceiling or the door of the shower enclosure.

Note: The wall bracket has two holes. These can be installed horizontal or vertical. Distance between holes is 12mm.

- Once you are satisfied with the hole locations marked on the masking tape are correct. Drill two holes at 6.5mm for wall plugs supplied.

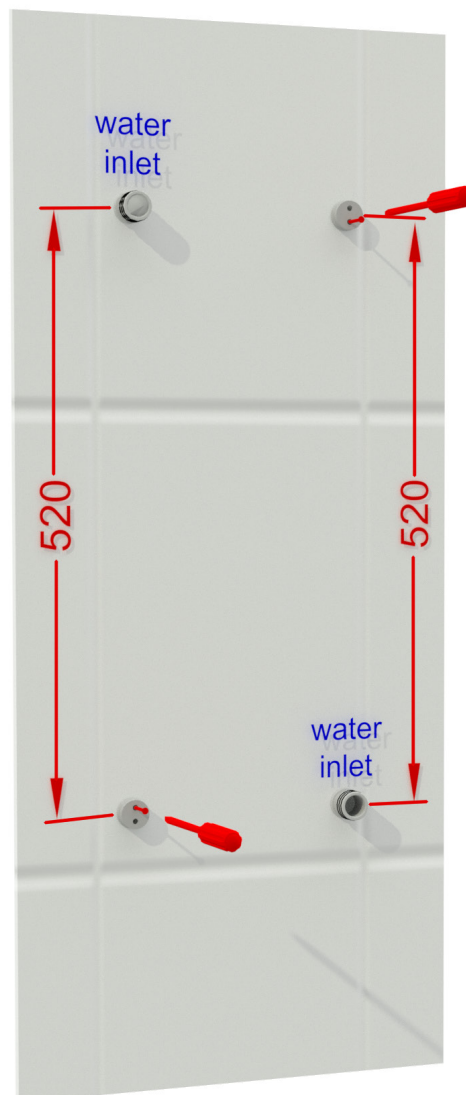

FAILURE TO COMPLY WITH ANY OF THE ABOVE INSTRUCTIONS WILL VOID ALL WARRANTIES

CASA LUSSO Installation Instructions

ELEMENTS Square Shower Rail with External Water Inlet (ESR03-XX)
ELEMENTS Gooseneck Shower Rail with External Water Inlet (ESR06-XX)


Suits ELA-XX, ELD-XX, ELF-XX & SS150-XX/SHP-MB

3. Install Water Inlet Adapter.

Screw the ½ inch BSP wall inlet adapter to the ½ male threaded pipe on the wall.

NOTE: As this is a Stainless Steel to Brass connection, use PTFE Grey plumbing tape or thread sealant.

DO NOT use white or pink Teflon tape.

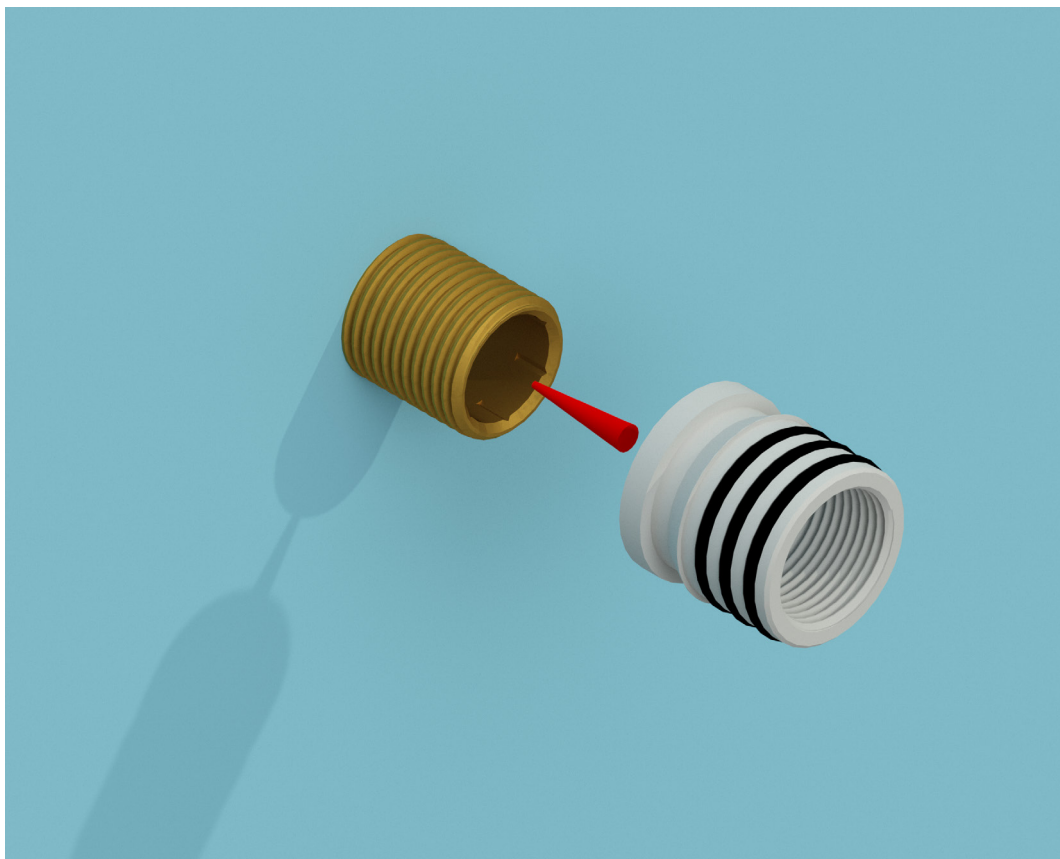

FAILURE TO COMPLY WITH ANY OF THE ABOVE INSTRUCTIONS WILL VOID ALL WARRANTIES

CASA LUSSO Installation Instructions

ELEMENTS Square Shower Rail with External Water Inlet (ESR03-XX)

ELEMENTS Gooseneck Shower Rail with External Water Inlet (ESR06-XX)

Suits ELA-XX, ELD-XX, ELF-XX & SS150-XX/SHP-MB

4. Install shower rail assembly to the wall.

- Slide wall flanges forward against the rail to access four grub screws. Tighten 4 x grub screws using a hex key.
- Do not slide flange back against the wall until installation is finished and water leak testing has been done.



FAILURE TO COMPLY WITH ANY OF THE ABOVE INSTRUCTIONS WILL VOID ALL WARRANTIES

CASA LUSSO Installation Instructions

ELEMENTS Square Shower Rail with External Water Inlet (ESR03-XX) ELEMENTS Gooseneck Shower Rail with External Water Inlet (ESR06-XX)

Suits ELA-XX, ELD-XX, ELF-XX & SS150-XX/SHP-MB

5. Connect the Shower Hose, Hand Shower and Shower Head.

- Face hand shower towards the shower base and turn on the water.
- Check the handle of the on/off diverter is facing the same direction as the outlet being used at the time.
- Check for any water leakages at the water inlet or any connections on the shower rail.
- If no leakages are detected, turn off the shower and slide the two wall flanges back against the wall.



FAILURE TO COMPLY WITH ANY OF THE ABOVE INSTRUCTIONS WILL VOID ALL WARRANTIES